



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting


Issue 4

## TFD 1 VK FORD FIESTA 2008>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	F	8	M10 x 40 Bolts, 2 Nuts & 8 Washers
B	1	Right Hand Side Arm	G	2	M12 x 22 Bolts & Washers
C	1	Left Hand Side Arm	H	2	M12 x 25 Bolts & Washers
D	1	Detachable Housing	J	4	12 x 25 Flat Washers
E	1	Flip Down Socket Plate	K	4	10 x 30 Flat Washers

1. Remove the rear bumper.
2. Remove the bumper impact beam (This is not refitted with the Towbar) replace nuts back onto the studs.
3. Locate Item **B** into the right hand chassis and loosely bolt in place using item **F** with item **K**.
4. Locate item **C** into the left hand chassis and loosely bolt in place using item **F** with item **K**.
5. Using item **F** bolt item **A** between item **B** and item **C**.
6. Using item **G** with item **J** and item **H** with item **J** bolt item **D** and item **E** to item **A**.
7. Fully tighten all nuts and bolt and ensure Towbar is rigid and secure.
8. Cut the bumper **SEE SKETCH**.
9. Refit the bumper.

**NOTE: On some models you may find it necessary to trim the chassis ends to allow side arms to sit correctly. SHOWN IN. FIG.1**

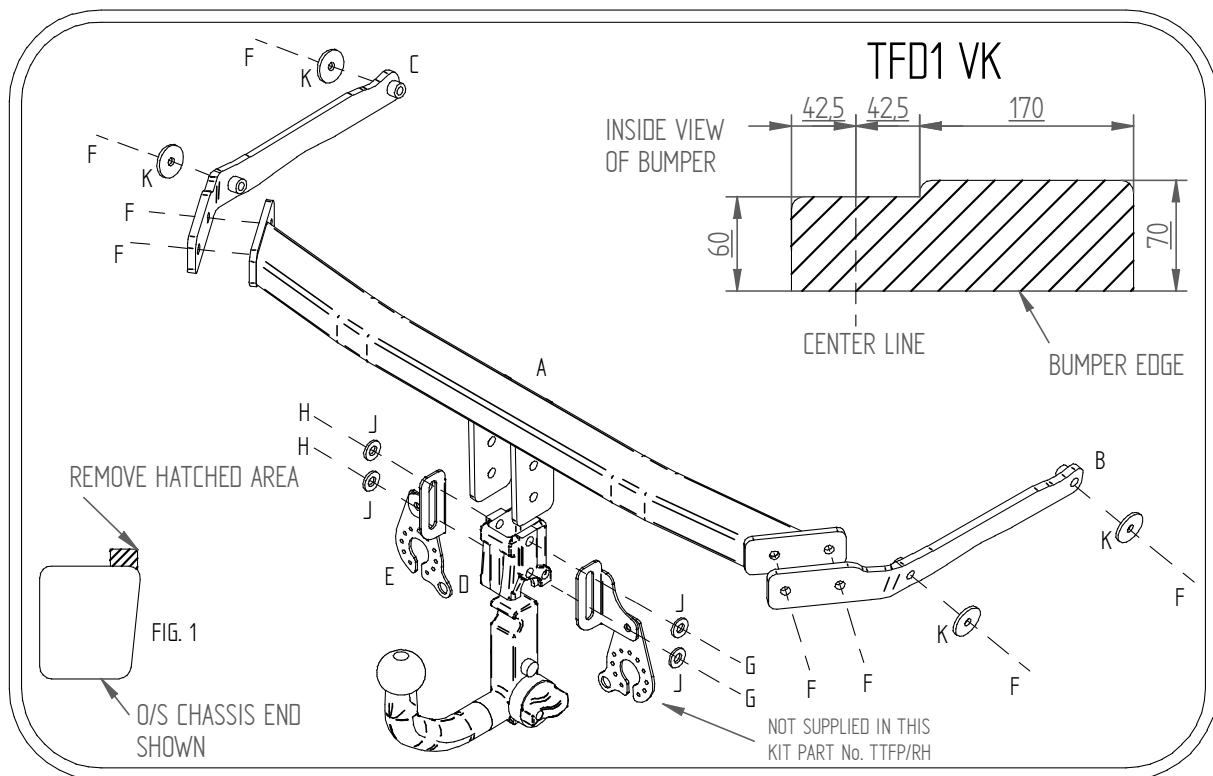

**Note:** nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.