



# Tow-Trust Towbars


Important: Please read General Notes overleaf before fitting

Issue 8

## TVW625 Volkswagen Passat July 2005>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	C	2	M16 x 50 Bolts, Nuts & S/P Washers
B	1	Extension Bar	D	4	M12 x 40 Bolts Grade 10.9 & S/P Washers
			E	2	M12 x 85 Grade 10.9 Bolts & Nyloc Nuts
			F	8	12 x 30 Flat Washers

1. Remove the rear light cluster. **PASSAT SAL & EST:** (Fixings found behind plastic trim on the side of cluster) **PASSAT CC:** (Three fixings internal of boot)
2. Remove the rear bumper. Four fixings around each wheel arch, one fixing at each bumper tip, two fixings below each light cluster and fixings along the lower edge. (**NOTE: PASSAT CC HAS HIDDEN FIXING AROUND WHEEL ARCH**).
3. Pull each side of the bumper to remove off sliders.
4. Cut a section from the lower edge of the bumper (see sketch) Trim to suit.
5. Remove the bumper beam. (This is not refitted with the towbar.)
6. Temporarily lower the heat shield.
7. Remove plastic cover from the right hand chassis rail.
8. Remove tape from the outer face of each chassis member covering the towbar mounting holes.
9. Locate Item **A** into each chassis member and using Item **D** with Item **F** bolt into place through existing holes.
10. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
11. Re-fit exhaust heat shield, plastic cover, rear bumper and light clusters.
12. Using Item **E** with Item **F** bolt Item **B** to Item **A**.
13. Using Item **C** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.

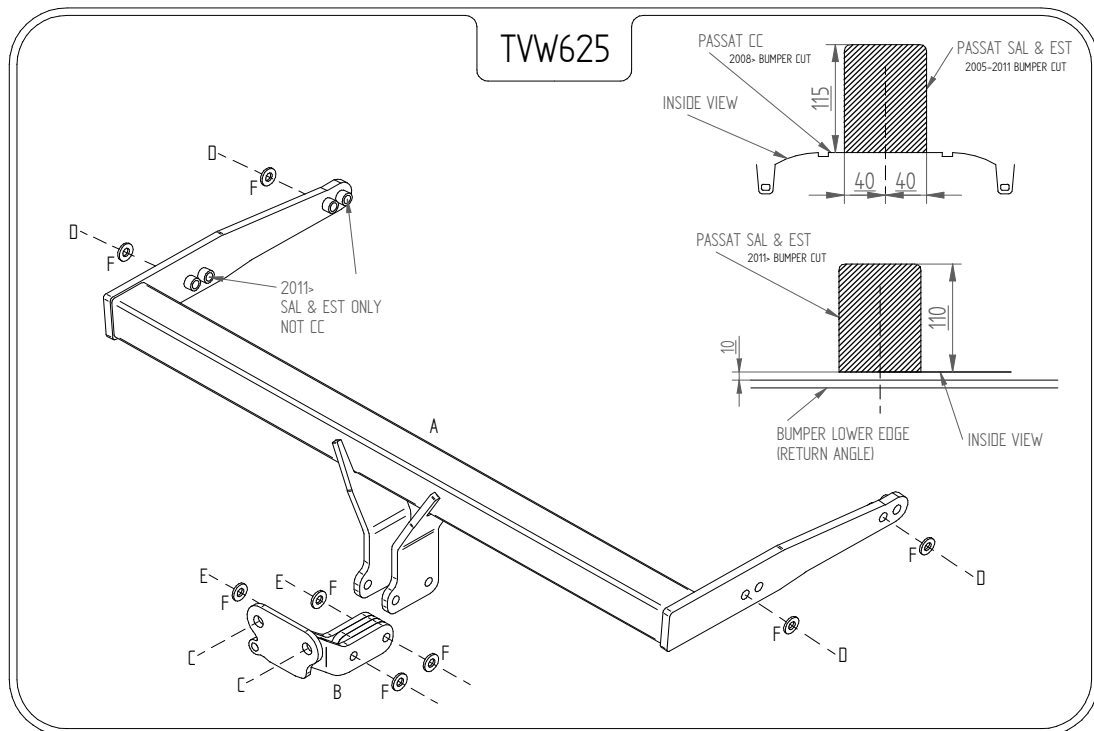

**Note:**

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.